

2	Bk	*	*	brake pad wear	LH/RH front brake pads
3	R	119	2	+ via ignition	fuse and relay panel 48-11
4	Be	122	2	coolant temperature	temperature sender
5	O/Gn	128	1	fuel level	fuel sender

B 30

C 33

6


1	Bk/Gn	127	1	oil level gauge	oil level sender
3	Bk/Gn	126	1	oil level gauge	oil level sender

1	Y	91	4	EARTH	fuse and relay panel 46-5
	Bk	92	2		
				(panel/park lights ON)	lit by backscatter from panel lighting
4	R/Gn	37	1	low beam ON	light switch 59
5	Be/Gn	30	1	high beam ON	light switch 59
6	R/Gn	81	1	rear window demister ON	rear screen demister switch 35-10

A 31

D 32

1	Bk	121	2	feed for tachometer	AEI module
3	W/Gn	68	1	direction indicators ON	fuse and relay panel 47-9
4	O/Gn	151	1	alternator charging	alternator 12
5	Bk/Gn	69	1	hazard warning lights ON	hazard warning lights switch 34-10
6	W	133	2	rear fog light ON	rear fog light switch 106-10
7	Bk	129	2	hand brake ON	hand brake warning switch to 308 then 64
8	Be	159	2	low fuel warning	low fuel sender
10	W	119	2		a loose wire with black

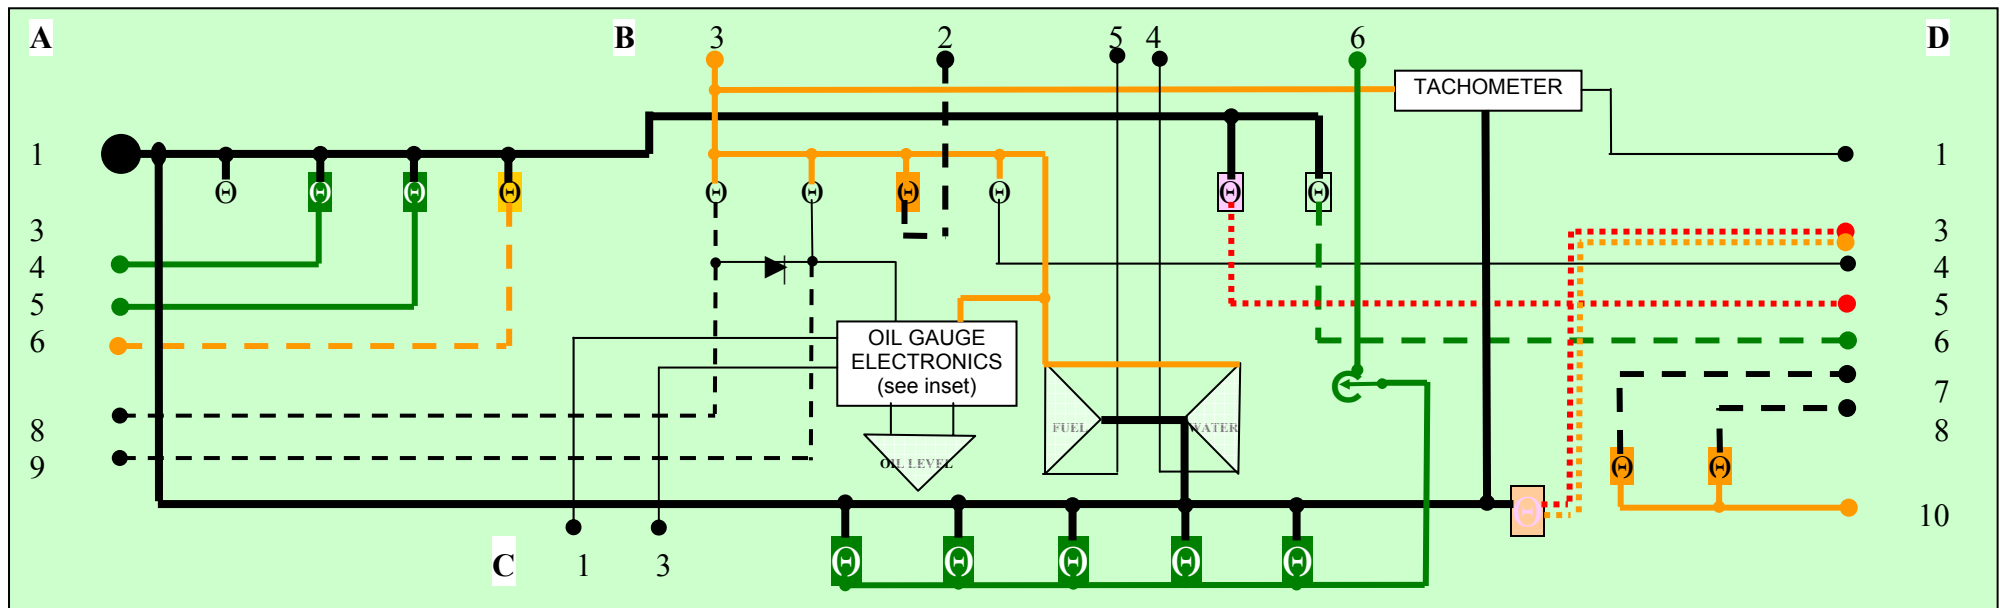

INSTRUMENT PANEL 29

INSERT: OIL GAUGE ELECTRONICS

