

RENAULT FUEGO: HEATING/VENTILATION AND AIR CONDITIONING SYSTEMS WIRING

VENTILATION CONTROL BAR: SETTINGS AND FUNCTIONS

BUTTON NO (LEFT TO RIGHT)	ELECTRICAL CONNECTIONS MADE	VACUUM CONNECTIONS MADE	ELECTRICAL ACTIONS	VACUUM ACTIONS
1	Gy – Gn - Be	NIL	VENTILATION FAN CONTROL (NEVER OFF)	ALL VENTS OPEN
2	Gy – Y	BLACK	VENTILATION FAN CONTROL (CAN SWITCH OFF)	SIDE VENTS ONLY CLOSED
3	Gy – Y	BLACK BLUE	VENTILATION FAN CONTROL (CAN SWITCH OFF)	SIDE AND CENTRE VENTS CLOSED
4	Y – R Gn – Be	BLACK RED	ALL OFF	INLET AND SIDE VENTS CLOSED
5	Gy – Y – Be	BLACK BLUE RED	VENTILATION FAN CONTROL (NEVER OFF)	ALL VENTS EXCEPT WINDSCREEN CLOSED
6	Gy – Y - R	BLACK RED	A/C ON A/C FAN CONTROL (NEVER OFF) BOTH RADIATOR FANS ON	INLET AND SIDE VENTS CLOSED

RENAULT FUEGO: HEATING/VENTILATION AND AIR CONDITIONING SYSTEMS WIRING

VENTILATION AND AIR CONDITIONING CONTROL PANEL					
BUTTON 1	•	•	•		
BUTTON 2			•	•	
BUTTON 3			•	•	
BUTTON 4	•	•	•	•	•
BUTTON 5		•	•	•	•
BUTTON 6		•	•	•	•
END	Gn	Be	Gy	Y	R
LEAD	Y	Be	Be	W	Y
				Y	R
	3	5	2	4	1

SPEED CONTROL FOR VENTILATION AND AIR CONDITIONING FANS					
HIGH					•
MEDIUM				•	
LOW		•			
OFF					
	Y	Be	Be	Gn	Or

49-11, FUSE 8

49-10, FUSE 8

75	74
9	5
Bk/Y	Be
CONNECTOR	
286	
73	
6	
Gy	

VENTILATION FAN MOTOR 280		
1	2	3
CONNECTOR		
72	71	70
9	9	9
W/Y	Be/M	R/Y
1	2	3

THROUGH H

R	Y	Be	Gn	Or
BLACK				
CONNECTOR				
R	W	Be	Gn	Or

1	2		4	5
Gy	W/Y		Be/M	R/Y
73	72		71	70
6	9		9	9
WHITE				
BLACK				
VENTILATION CONTROLS CONNECTOR 262				
W			Be	Y

loose


THROUGH GH

26	
4	
Y	W
GREY	
BLACK	
CONNECTOR	
194	
Y	W

Y	W	R
AIR CONDITIONING THERMOSTAT (BEHIND LHS PANEL OF CENTRE CONSOLE)		

Be	Gn	Or	Or
2.5Ω			
1.1Ω			
VENTILATION AND AIR CONDITIONING FANS RHEOSTAT (BEHIND LHS PANEL OF CENTRE CONSOLE)			

(BEHIND RHS PANEL OF CENTRE CONSOLE)

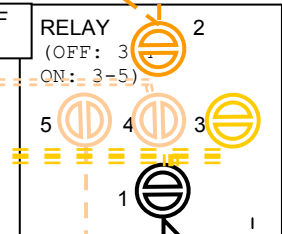

Pi	Bk
AIR CONDITIONING FAN MOTOR (BEHIND CENTRE CONSOLE)	

VACUUM SWITCH

